

DAY International *DIAMOND-LOC II*[®]

INSTALLATION - REMOVAL INSTRUCTIONS

Step 1

Channel is attached to mat when received.

Step 2



Lead end of mat installed in cylinder slot.
Tap down with hammer. No screws needed -
friction fit.

Step 3


Tail end tapped down with hammer.



130 West Second Street, P.O. Box 338
Dayton, Ohio 45401-0338

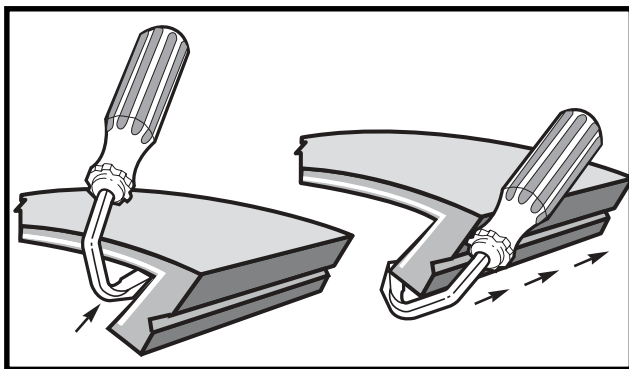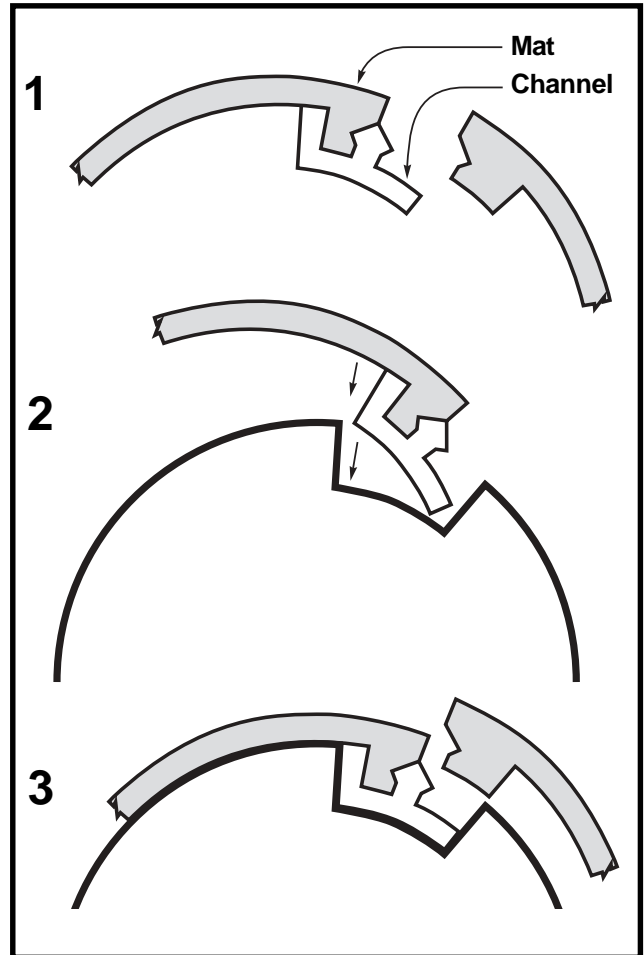

Cut Mat Removal - Start with the large leg of the mat. Use the tool to remove. Lift the corner of the upper end of the mat until it pops free of the channel. Then, lay the tool on its side under the lip of the mat and pull across the cylinder width like you're pulling a zipper. **Do not use like a can opener.**

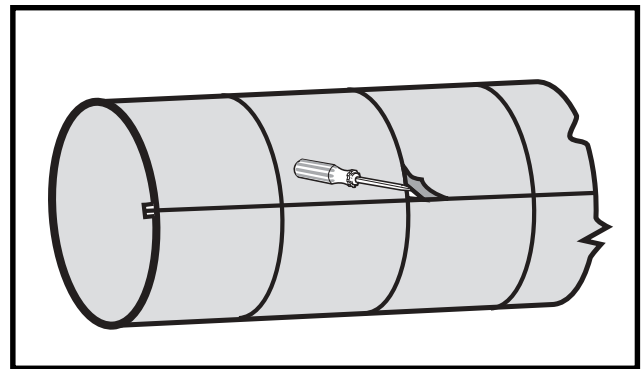

Changing A Damaged Center Mat - Use a thin blade screwdriver to raise the side of the damaged mat at the corner until it is free of the channel*. Insert the removal tool and pull across the mat as in normal removal.

*Often, at this point, the mat can be pulled out. If not, use the screwdriver as above to free the other end.